

WAECO

mobile solutions

CF SERIES: THINGS TO KNOW



**2 YEAR
WARRANTY**

COOLFREEZE Compressor Refrigerators/Freezers

All temperatures are °F.
IN = temperature inside the CF Series unit. OUT = surrounding (ambient) temperature

ENERGY CONSUMPTION

| PRODUCT | 41° IN / 68° OUT | 41° IN / 86° OUT | 41° IN / 92° OUT | 5° IN / 68° OUT | 5° IN / 86° OUT | 5° IN / 92° OUT |
|---------|------------------|------------------|------------------|-----------------|-----------------|-----------------|
| CF-18 | .5 a/h | .85 a/h | 1.1 a/h | 1.2 a/h | 2.0 a/h | 2.2 a/h |
| CF-25 | .7 a/h | .9 a/h | 1.0 a/h | 1.5 a/h | 2.2 a/h | 2.4 a/h |
| CF-35 | .7 a/h | .9 a/h | 1.0 a/h | 1.6 a/h | 2.4 a/h | 2.7 a/h |
| CF-40 | .8 a/h | 1.0 a/h | 1.0 a/h | 1.7 a/h | 2.1 a/h | 2.3 a/h |
| CF-50 | .7 a/h | .9 a/h | 1.0 a/h | 1.6 a/h | 2.3 a/h | 2.6 a/h |
| CF-80 | 1.2 a/h | 1.6 a/h | 1.8 a/h | 2.1 a/h | 2.7 a/h | 2.9 a/h |
| CF-110 | 1.6 a/h | 1.8 a/h | 2.0 a/h | 2.3 a/h | 2.9 a/h | 3.7 a/h |

ERROR LIGHT FLASH CAUSE

TROUBLESHOOTING

● **Low voltage.** Wire “outside” of the appliance may be weak. Check wiring.

● ● **Fan overload.** Be sure the fan is clear of any obstructions.



● ● ● **Motor start error.** Keep unit off for 10 minutes, then restart.

● ● ● ● **Low motor speed.** Call WAECO USA service department at (860) 664-4911 from 8am to 5pm EST, M-F.

● ● ● ● ● **Thermal cut-out.** Too much heat around the motor. Check ventilation.

EMERGENCY SWITCH

Allows the unit to run if the electronics fail for any reason. This avoids any food being lost if you are a long way from a service point as the fridge will still run even with an electronic fault. For normal operation, the emergency switch should always be in the OFF position. When the switch is in the ON position, it will bypass all the electronics and the compressor will run continuously therefore freezing all your food. You can modify the temperature by periodically unplugging the unit.



VISIT OUR WEBSITE TO FIND A SERVICE DEALER IN YOUR AREA: www.waecousa.com